

EC8A

Ether CAT 数显数字式混合伺服驱动器使用手册

Ether CAT Digital display digital hybrid servo driver User's Manual



摩川技术(深圳) 有限公司

Moschon Technology (Shenzhen) Co. , Ltd.

该产品由深圳市泰奇科智能技术有限公司独家发行, 版权所有!

目录

前言/Foreword	3
1 概述/Overview	4
1.1 产品介绍/Product Introduction.....	4
1.2 特性/Characteristics.....	4
1.3 应用领域/Application areas.....	5
2 性能指标/Performance Index	5
2.1 电气特性/Electrical characteristics.....	5
2.2 使用环境/Use environment.....	6
3 安装/Installation	6
3.1 安装尺寸/Mounting dimensions.....	6
3.2 安装方法/Installation method.....	7
4 驱动器端口与接线/Driver ports and wiring	7
4.1 接线示意图/Schematic diagram of wiring.....	8
4.2 端口定义/Port Definition.....	8
5 拨码定义/Dial definition	13
5.2 开环电机/闭环电机设定/ OPEN-LOOP MOTOR/CLOSED-LOOP motor setting.....	14
5.3 驱动控制模式设定/Drive control mode setting.....	14
5.4 电机初始方向设置/Initial orientation of motor.....	14
5.5 滤波时间设置/Filter time setting.....	14
5.6 地址功能设定/Address function setting.....	15
6 通讯协议说明	15
6.1 工作模式.....	15
6.2 操作说明.....	17
7 保修及售后服务 /Warranty and after-sales service	23

前言/Foreword

感谢您使用本公司开环步进驱动器。

Thank you for using our open step drive.

在使用本产品前，请务必仔细阅读本手册，了解必要的安全信息、注意事项以及操作方法等。错误的操作可能引发极其严重的后果。

Before using this product, please read this manual carefully to understand the necessary safety information, precautions, and operation methods. Incorrect operation can have extremely serious consequences.

本产品的设计和制造不具备保护人身安全免受机械系统威胁的能力，请用户在机械系统设计和制造过程中考虑安全防护措施，防止因不当的操作或产品异常造成事故。

This product is designed and manufactured without the ability to protect personal safety from mechanical system threats. Users are advised to consider safety precautions during mechanical system design and manufacturing to prevent accidents caused by improper operation or product abnormalities.

由于产品的改进，手册内容可能变更，恕不另行通知。用户对产品的任何改装我公司将不承担任何责任。

阅读时，请注意手册中的以下标示：

Due to product improvements, the contents of this manual are subject to change without notice. Our company will not be responsible for any modification of the product by the user.

When reading, please pay attention to the following signs in the manual:



注意：提醒您注意文字中的要点。



小心：表示错误的操作可能导致人身伤害和设备损坏。

本产品经过国家强制 3C 认证，CE 认证，ROHS 认证

This product has passed the national mandatory 3C certification, CE certification, ROHS certification



1 概述/Overview

1.1 产品介绍/Product Introduction

EC8A 是我公司十多年来新推出的 Ether CAT 总线型 LCD 屏显示的混合伺服驱动器，采用最新浮点 32 位 MCU 数字处理技术，驱动器控制算法采用先进的变电流技术和先进的变频技术，驱动器发热小，电机振动小，运行平稳。用户可以设置 1-255 内的任意 ID 地址以及额定电流内的任意电流值，电机匹配等，能够满足大多数场合的应用需要。该总线型驱动器可以驱动多种两相混合伺服电机，闭环步进电机等。由于采用内置微细分技术，平滑滤波技术，即使在低细分的条件下，也能够达到高细分的效果，低中高速运行都很平稳，噪音超小。驱动器内部集成了参数上电自动整定功能，能够针对不同电机自动生成最优运行参数，最大限度发挥电机的性能。

EC8A is a new hybrid servo driver for LCD panel display based on Ether CAT bus, which has been introduced by our company for more than 10 years. It adopts the latest floating-point 32-bit MCU digital processing technology. The driver control algorithm adopts advanced variable current technology and advanced frequency conversion technology, the driver has small heating, small motor vibration and smooth running. User can set any ID address in 1-255 as well as any current value in the rated current, motor matching and so on, can meet the application needs of most occasions. The bus driver can drive a variety of two-phase hybrid servo motor, closed-loop stepper motor and so on. Because of the built-in micro-subdivision technology, smooth filtering technology, even in the low-subdivision conditions, but also can achieve high-subdivision effect, low, medium and high-speed operation is very smooth, ultra-low noise. The auto-tuning function is integrated in the driver, which can automatically generate the optimal operating parameters for different motors and maximize the performance of the motors.

1.2 特性/Characteristics

- 全新浮点 32 位 MCU 技术

New floating-point 32-bit MCU technology

- 2 路模拟量 0-5V 输入

2-way analog 0-5V input

- 4 路光耦隔离 OC 输出

4-channel optocoupler isolated OC output

- 参数上电自动整定功能

Automatic setting function for power-on parameters

- 变电流控制使电机发热大为降低

Variable current control greatly reduces motor heating

- 编码器线数 500-5000 线均可配置

Encoder line number 500-5000 lines can be configured

- 可驱动多种混合伺服电机，例如 28，42，57，60，86 等机座混合伺服（闭环步进）系列电机

Can drive a variety of hybrid servo motors, such as 28, 42, 57, 60, 86 and other base hybrid Servo (closed-loop stepping) series motors

- 5 路光隔离信号输入，其中 2 路为高速光耦隔离
5 Optical isolation signal inputs, 2 of which are high-speed optocoupler isolation
- 通讯频率 100MHz
Communication Frequency 100 MHz
- 电流可在 0.5-8A 之间随负载变化而变换
The current may vary from 0.5 to 8A depending on the load
- 出厂默认细分为 50000（可通过软件修改）
Factory default subdivided into 50000(can be modified through software)

1.3 应用领域/Application areas

适合各种中小型自动化设备和仪器，例如：锁螺丝机，剥线机，绕线机，端子机，激光机，喷绘机、中小型雕刻机、电子加工设备、自动抓取设备、专用数控机床、包装设备和机器人等。在用户期望低噪声、高速度的设备中应用效果尤佳。

Suitable for all kinds of small and medium-sized automation equipment and instruments, such as: lock screw machine, wire stripping machine, winding machine, terminal machine, laser machine, printing machine, medium and small-sized engraving machine, electronic processing equipment, automatic grab equipment, special CNC machine tools, packaging equipment and robots. It works especially well on devices that users expect to have low noise and high speed.

2 性能指标/Performance Index

2.1 电气特性/Electrical characteristics


说明 Explanation	EC8A			
	最小值 Minimum Value	典型值 Typical Value	最大值 Maximal Value	单位 Unit
连续输出电流 Continuous output current	0.5	-	8.0	A
电源电压（交流） Power Supply Voltage (AC)	20	24/36/48	60	Vac
控制信号输入电流 Control signal input current	6	10	16	mA
控制信号接口电平 Control signal interface level	5	5	24	Vdc
OC 输出上拉电压 OC output pull-up voltage	5	-	24	Vdc
Ether-CAT 通讯频率 Ether-CAT frequency	-	100	-	MHz
绝缘电阻 Insulation Resistance	100			MΩ

2.2 使用环境/Use environment

冷却方式 Cooling Mode		自然冷却或强制风冷 Natural Cooling or forced air cooling
使用环境 Service Environment	场合 Occasion	不能放在其它发热的设备旁, 要避免粉尘、油雾、腐蚀性气体, 湿度太大及强振动场所, 禁止有可燃气体和导电灰尘。 Can not be placed next to other heating equipment, to avoid dust, oil mist, corrosive gases, humidity is too large and strong vibration sites, prohibited combustible gases and conductive dust.
	温度 Temperature	-10℃ ~ +50℃
	湿度 Humidity	40 ~ 90%RH
	振动 Vibration	5.9m/s ² MAX
保存温度 Storage temperature		-20℃~60℃
使用海拔 Use Elevation		1000 米以下 Below 1000 meters
重量 Weight		0.2KG

3 安装/Installation

3.1 安装尺寸/Mounting dimensions

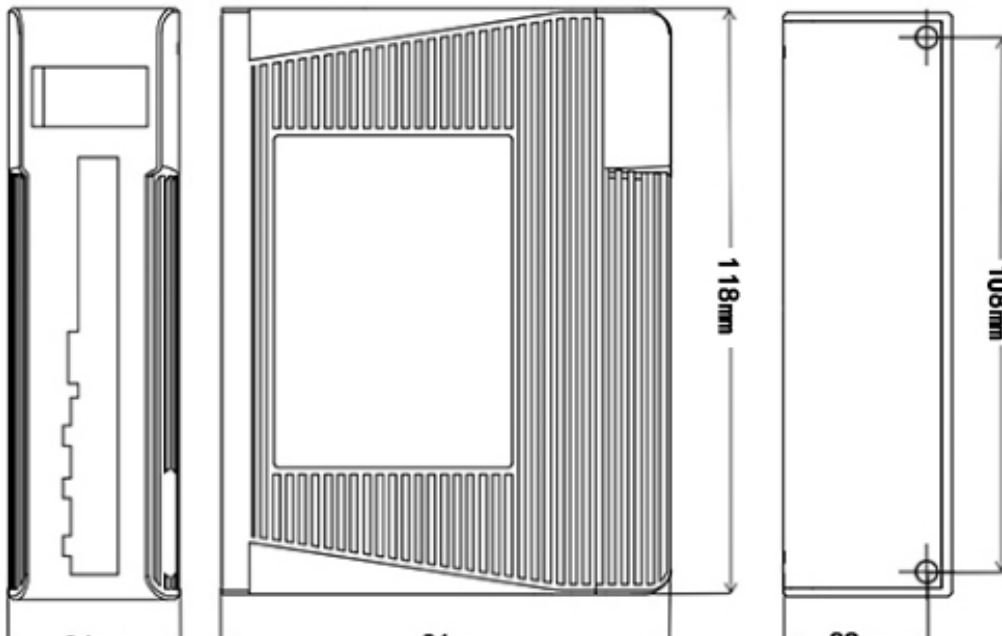

3.2 安装方法/Installation method

驱动器的可靠工作温度通常在 60℃ 以内，电机工作温度为 80℃ 以内。

The reliable operating temperature of the driver is usually within 60℃, and the motor operating temperature is within 80℃.

建议使用时选择自动半流方式，马达停止时电流自动减一半，以减少电机和驱动器的发热。

It is recommended to use the automatic semi-flow mode when using the motor. When the motor stops, the current is automatically reduced by half to reduce the heat of the motor and the drive.

安装驱动器时请采用竖着侧面安装，使散热齿形成较强的空气对流。


Install the drive with vertical side mounting so that the heat dissipating teeth form a strong air convection.

必要时机内靠近驱动器处安装风扇，强制散热，保证驱动器在可靠工作温度范围内工作。

Install a fan near the drive when necessary to force heat dissipation to ensure that the drive works within a reliable operating temperature range.

4 驱动器端口与接线/Driver ports and wiring

4.1 接线示意图/Schematic diagram of wiring

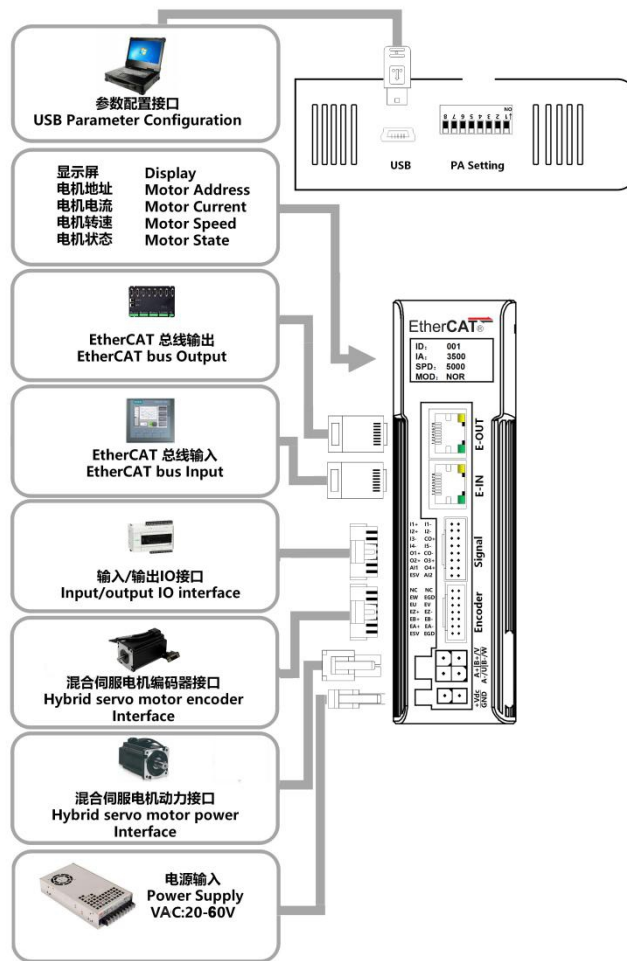

4.2 端口定义/Port Definition

4.2.1 LCD 屏显示及状态指示/LCD Display and status indication

上电后 LCD 屏亮说明驱动器电源正常，当驱动器接通电源时，LCD 屏显示界面会显示公司相关信息，然后跳到正常界面，正常界面一般情况出厂会默认四行数据，如下：

When the driver is connected to the power, the LCD screen display will display the company's relevant information, and then jump to the normal interface, the normal interface will normally default four lines of data factory, as follows:

序号 No.	显示内容 Display content	内容或单位 Content or unit	说明 Account for
1	地址 Address	ID 地址数 Number of ID addresses	当前驱动器的地址 The address of the current drive
2	电机机座 Motor base	TC42/TC57/TC60/TC86	闭环电机的机座号显示 Display the machine seat number of the closed-loop motor

3	实时速度 Real-time velocity	RPM	每分钟多少转 How many revolutions per minute
4	算法模式 Algorithmic pattern	FOC/PM/LEAD/全电流	显示当前控制算法 Displays the current control algorithm

4.2.2 控制信号输入端口/Control Signal Input Port

控制信号接口

Control Signal interface

名称 Name	功能 Function
I1+	<p>高速信号：脉冲上升沿有效；I1 高电平时 5~24Vdc，低电平时 0~0.5V。为了可靠响应脉冲信号，脉冲宽度应大于 1.5 μs。</p> <p>High speed signal: Pulse Rising Edge Effective; I 1 high level 5 -24 VDC, Low Level 0 ~ 0.5 v. In order to respond reliably to the pulse signal, the pulse width should be greater than 1.5 s.</p>
I1-	
I2+	<p>高速信号：脉冲上升沿有效；I2 高电平时 4.5~28Vdc，低电平时 0~0.5V。为了可靠响应脉冲信号，脉冲宽度应大于 1.5 μs。</p> <p>HIGH-SPEED SIGNAL: Pulse Rising Edge is effective; I2 high level 4.5 ~ 28 VDC, Low Level 0 ~ 0.5 v. In order to respond reliably to the pulse signal, the pulse width should be greater than 1.5 s.</p>
I2-	
C0+	<p>低速信号：I3, I4, I5 的共阳极输入，电平 5-24V 兼容</p> <p>Low Speed Signal: I 3, I 4, I 5 common anode input, level 5-24V compatible</p>
I3-	<p>低速信号 I3 的负极输入</p> <p>Negative input for low-speed signal I3</p>
I4-	<p>低速信号 I4 的负极输入</p> <p>Negative input for low-speed signal I4</p>
I5-	<p>低速信号 I5 的负极输入</p> <p>Negative input for low-speed signal I5</p>
C0-	<p>共阴极 OC 射极输出，01+, 02+, 03+, 04+射极 OC 输出公共端</p> <p>Common cathode OC emitter output, 01,02,03,04 emitter OC output common end</p>
01+	<p>01+射极输出，最大上拉电压 24Vdc，上拉电阻 2K Ω，最大输出电流 100mA</p> <p>01 emitter output, the biggest pull-up voltage 24 VDC, pull-up resistors 2 k Ω, maximum output current 100 ma</p>

02+	02+射极输出, 最大上拉电压 24Vdc, 上拉电阻 2KΩ, 最大输出电流 100mA 02 emitter output, the biggest pull-up voltage 24 VDC, pull-up resistors 2 kΩ, maximum output current 100 ma
03+	03+射极输出, 最大上拉电压 24Vdc, 上拉电阻 2KΩ, 最大输出电流 100mA 03 emitter output, the biggest pull-up voltage 24 VDC, pull-up resistors 2 kΩ, maximum output current 100 ma
04+	04+射极输出, 最大上拉电压 24Vdc, 上拉电阻 2KΩ, 最大输出电流 100mA M1 emitter output, the largest voltage 24 VDC, 2 kΩ pull-up resistors, maximum output current 100 ma
AI1	I0 输入/输出口配置, 可定义 0-5V 模拟量电压输入, 需联系厂商 Io input/output configuration, can define 0-5V analog voltage input, need to contact the manufacturer
AI2	0 输入/输出口配置, 可定义 0-5V 模拟量电压输入, 需联系厂商 0 input/output configuration, can define 0-5V analog voltage input, contact the manufacturer
E5V	提供电压 5V, 电流 50mA Supply Voltage 5V, current 50mA

4.2.3 编码器输入端口/Encoder input port

接口名称 Interface name	功能 Features
EA+	编码器 A 信号差分输入接口 Encoder a signal differential input interface
EA-	
EB+	编码器 B 信号差分输入接口 Encoder b signal differential input interface
EB-	
EZ+	编码器 B 信号差分输入接口(编码器没有 Z 信号可以不接) Encoder Z signal differential input interface(The encoder doesn't have a Z signal to ignore)
EZ-	
EU	霍尔 U 信号单端输入, 用于直流伺服电机, 外转子伺服电机, 无刷伺服电机, 混合伺服不用 Houle u signal single input, used for DC servo motor, external rotor servo motor, brushless servo motor, hybrid servo
EV	霍尔 V 信号单端输入, 用于直流伺服电机, 外转子伺服电机, 空心杯伺服电机, 无刷伺服电机, 混合伺服不用 Houle v Signal single input, for DC servo motor, external rotor Servo Motor, Hollow Cup Servo Motor, brushless Servo Motor, hybrid servo

EW	霍尔 W 信号单端输入，用于直流伺服电机，外转子伺服电机，空心杯伺服电机，无刷伺服电机，混合伺服不用 Houle W Signal single input, for DC servo motor, external rotor Servo Motor, Hollow Cup Servo Motor, brushless Servo Motor, hybrid servo
E5V	给电机的编码器和霍尔元件提供直流电压 5V，电流 100mA It supplies the motor's encoder and Houle element with a DC voltage of 5V and a current of 100mA
ggd	5V 参考段负极 5V Reference Negative electrode
gnd	5V 参考段负极 5V Reference Negative electrode
NC	预留本公司内部技术人员使用，不能外接任何其他电路，否则烧坏驱动器 Reserved the use of the company's internal technical personnel, can not be external to any other circuit, or burn the drive
NC	预留本公司内部技术人员使用，不能外接任何其他电路，否则烧坏驱动器 Reserved the use of the company's internal technical personnel, can not be external to any other circuit, or burn the drive

4.2.4 强电接口/Strong-current interface

接口名称 Interface name	功能 Features
GND	直流电源地 DC power source
+VDC	直流电源正极，供电电压范围：直流 20-60Vdc，推荐 24Vdc，48Vdc 工作。 DC power positive, supply voltage range: DC 24-80VDC, recommended 24VDC, 36VDC, 48VDC work.
A+	步进电机 A+相绕组接口，开环步进和混合伺服用到，直流伺服该接口不用。 The a-phase winding interface of stepper motor, open-loop stepping and hybrid servo are used, but the DC servo interface is not.
A-/U	步进电机 A-相绕组接口或直流伺服 U 相绕组接口 Step Motor a-phase winding interface or DC Servo U phase winding interface
B+/V	步进电机 B+相绕组接口或直流伺服 V 相绕组接口 Step Motor b+phase winding interface or DC Servo V phase winding interface
B-/W	步进电机 B-相绕组接口或直流伺服 W 相绕组接口 Step Motor b-phase winding interface or DC Servo W phase winding interface

4.2.5 Ether CAT 总线通讯接口/Ether CAT bus communication interface

引脚号 Pin Number	信号 Signal	功能说明 Function description	
1	TX+	Ether CAT 数据发送正端 Ether CAT data send right	Ether CAT IN (ECAT OUT)
2	TX-	Ether CAT 数据发送负端 Ether CAT negative end of data transmission	

3	RX+	Ether CAT 数据接收正端 Ether CAT positive data reception	Ether CAT OUT (ECAT IN)
4	NC	不连接 Disconnected	
5	NC	不连接 Disconnected	
6	RX-	Ether CAT 数据接收负端 Ether CAT negative data receiver	
7	NC	不连接 Disconnected	
8	NC	不连接 Disconnected	
9	TX+	Ether CAT 数据发送正端 Ether CAT data send right	
10	TX-	Ether CAT 数据发送负端 Ether CAT negative end of data transmission	
11	RX+	Ether CAT 数据接收正端 Ether CAT positive data reception	
12	NC	不连接 Disconnected	
13	NC	不连接 Disconnected	
14	RX-	Ether CAT 数据接收负端 Ether CAT negative data receiver	
15	NC	不连接 Disconnected	
16	NC	不连接 Disconnected	

4.2.6 USB 串口 RS232-TTL (3.3V) 电平通讯接口/USB Serial Port RS232-TTL (3.3V) level communication interface

接口名称 Interface name	功能 Function	说明 Account for
+5V	5V 电源正极 5V power supply positive pole	靠近拨码测引脚 Near Dial Pin
TXD	RS232-TTL (3.3V) 发送端 RS232-TTL (3.3 v) sender	
RXD	RS232-TTL (3.3V) 接收端 RS232-TTL (3.3 v) receiver	
GND	5V 电源地 5V ground	0V
NC		

电源电压在规定范围之间都可以正常工作，驱动器最好采用非稳压型直流电源供电，也可以采用变压器降压+桥式整流+电容滤波。但注意应使整流后电压纹波峰值不超过其规定的最大电压。建议用户使用低于最大电压的直流电压供电，避免电网波动超过驱动器电压工作范围。

The power supply voltage can work normally between the specified ranges. The driver is preferably powered by an unregulated DC power supply, or a transformer buck + bridge rectifier + capacitor filter. Note, however, that the peak voltage ripple after rectification should not exceed its specified maximum voltage. It is recommended that the user supply power with a DC voltage lower than the maximum voltage to prevent the grid from fluctuating beyond the operating range of the driver voltage.

如果使用稳压型开关电源供电，应注意开关电源的输出电流范围需设成最大。

If using a regulated switching power supply, be aware that the output current range of the switching power supply must be set to maximum.

请注意：

Please note:

接线时要注意电源正负极切勿反接；

When wiring, pay attention to the positive and negative poles of the power supply, do not reverse connection;

最好用非稳压型电源；

It is better to use an unstable power supply;

采用非稳压电源时，电源电流输出能力应大于驱动器设定电流的 60%即可；

The output capacity of the power supply current should be greater than 60% of the set current of the driver when an unstable power supply is used;

采用稳压开关电源时，电源的输出电流应大于或等于驱动器的工作电流；

When a regulated switching power supply is adopted, the output current of the power supply shall be greater than or equal to the working current of the driver;

为降低成本，两三个驱动器可共用一个电源，但应保证电源功率足够大。

To reduce costs, two or three drives can share a power supply, but the power supply should be large enough.

5 拨码定义/Dial definition

5.1 闭环电机设定/ Closed-loop motor setting

Motor	SW1	SW2	电机设定 Motor setting
28	on	on	当 S1、S2 设为 off off 时, 可以通过软件设定为所匹配的电机 When S1 and S2 are set to off, the motor can be set to match by software
42	off	on	
57/60	on	off	
Default 【86】	off	off	

5.2 开环电机/闭环电机设定/ OPEN-LOOP MOTOR/CLOSED-LOOP motor setting

Motor	SW3
Open-loop	on
Closed-loop	off

5.3 驱动控制模式设定/Drive control mode setting

Drivecontrolmode	SW4	Remark
FOC	off	矢量闭环控制（丝杆转动） VECTOR CLOSED-LOOP CONTROL (screw rotation)
PM	on	功率角闭环控制（皮带转动） Power Angle closed loop control (belt rotation)

5.4 电机初始方向设置/Initial orientation of motor

Direction	SW5	Remark
CCW	off	Counterclockwise
CW	on	Clockwise

5.5 滤波时间设置/Filter time setting

Filter Sel	SW6	SW7	Remark
Default [0ms]	on	on	当 S6、S7 设为 on on 时,可以通过软件设定为所需滤波时间,最大值为 25ms,分辨率为 0.1ms。 滤波时间越大,加速和高速性能越好,但插补效果变差。 When S6 and S7 are set to on on, the maximum filtering time can be set by software to 25ms with a resolution of 0.1 ms. The bigger the filtering time is, the better the performance of acceleration and high speed is, but the interpolation effect becomes worse.
[2ms]	off	on	
[12ms]	on	off	
[25ms]	off	off	

5.6 地址功能设定/Address function setting

SW8 为地址功能设定, off=NO, 驱动器适配倍福, 汇川, 松下, 众为兴, 正运动, 研华, 合信, 信捷等主站, 主站有自动扫描匹配地址功能, 无需硬件实现设置地址的主站, 拨码 SW1-SW7 的 A-E 功能描述有效。on=YES, 驱动器适配欧姆龙, 翠欧等主站, 这类主站需要通过硬件(比如拨码或上位机)来实现驱动器地址设置, 那么拨码 SW1-SW7 的 A-E 功能描述无效, SW1-SW7 将参考如下地址表设置:

SW8 is the address function setting, off = no, drive adapters Beifu, Huichuan, Matsushita, Zhongweixing, Zhengyun, Yanhua, Hexin, Xinjie and other main station, the main station has the function of automatically scanning and matching address, no need for hardware to achieve the main station of setting address, the A-E function description of dialing SW1-SW7 is valid. The driver is suitable for Omron, Trios and other master station, such master station needs hardware (such as dial or host) to achieve the driver address settings, then dial SW1-SW7 function description is invalid, SW1-SW7 will refer to the following address table settings:

ID Table

ID	S1	S2	S3	S4	S5	S6	S7
Reserved(出厂默认)	on	on	on	on	on	on	on
1	off	on	on	on	on	on	on
2	on	off	on	on	on	on	on
3	off	off	on	on	on	on	on
4	on	on	off	on	on	on	on
5	off	on	off	on	on	on	on
.....
126	on	off	off	off	off	off	off
127	off	off	off	off	off	off	off

注: 通过拨码硬件设置, 驱动器 SW1-SW7 的 ID 表格计算值计算公式为: $ID=1*S1+2*S2+4*S3+8*S4+16*S5+32*S6+64*S7$, 默认 ID 值为 0, 0 表示广播地址, 可以通过上位机或其它软件设置地址更高的地址。那么驱动器的相关参数, 功能和性能通过我司上位机配置。

Note: The ID table of drive SW1-SW7 is calculated with the following formula: $ID = 1 * S1 + 2 * s2 + 4 * s3 + 8 * s4 + 16 * s5 + 32 * s6 + 64 * S7$. The Default ID value is 0. 0 indicates the broadcast address, a higher address can be set by the host computer or other software. Then drive the relevant parameters, functions and performance through our PC configuration.

6 通讯协议说明

6.1 工作模式

指令输入方式	模式控制变量	对应工作模式
总线指令输入	通讯地址 6060H=1	位置模式 (PP 模式)
	通讯地址 6060H=3	速度模式 (PV 模式)
	通讯地址 6060H=6	回原点模式 (HM 模式)
	通讯地址 6060H=8	循环同步位置模式 (CSP)

注: EtherCAT 模式下各子模式英文缩写对应的含义:

(1) PP 模式: profile position mode

(2) PV 模式: Profile velocity mode

(3) HM 模式: Homing mode

(4) CSP 模式: Cyclic synchronous position mode

6.1.1 位置模式

PP 模式:

可能需要写入的对象字典:

序号	对象字典	对象字典含义	设定值	单位
1	6060H	操作模式	1	无
2	6040H	控制字	根据需要设定	无
3	607AH	目标位置	根据需要设定	Unit
4	6081H	位置模式下的协议速度	根据需要设定	Unit/S
5	6082H	位置模式下的起跳速度和停止速度	根据需要设定	Unit/S
6	6083H	协议加速度	根据需要设定	Unit/(S*S)
7	6084H	协议减速度	根据需要设定	Unit/(S*S)
8	6085H	急停减速度, 是否使用取决于 605A 的值	根据需要设定	Unit/(S*S)
9	605AH	急停减速度是否采用 (5: 采用; 其他值: 不采用)	根据需要设定	无
10	2000H	电机一圈脉冲数	根据需要设定	P

CSP 模式:

可能需要写入的对象字典:

序号	对象字典	对象字典含义	设定值	单位
1	6060H	操作模式	8	无
2	6040H	控制字	根据需要设定	无
3	607AH	目标位置	根据需要设定	Unit
4	2000H	电机一圈脉冲数	根据需要设定	P

HM 模式:

可能需要写入的对象字典:

序号	对象字典	对象字典含义	设定值	单位
1	6060H	操作模式	6	无
2	6040H	控制字	根据需要设定	无

3	6098H	原点方式	根据需要设定	无
4	6099-01H	寻找极限开关的速度	根据需要设定	Unit/S
5	6099-02H	寻找原点的速度	根据需要设定	Unit/S
6	609A-00H	回零加/减速度	根据需要设定	Unit/S
7	607C-00H	原点偏移量	根据需要设定	P

6.1.2 速度模式

PV 模式：

可能需要写入的对象字典：

序号	对象字典	对象字典含义	设定值	单位
1	6060H	操作模式	3	无
2	6040H	控制字	根据需要设定	无
3	60FFH	速度模式下的协议速度	根据需要设定	Unit/S
4	6083+00H	协议加速度	根据需要设定	Unit/(S*S)
5	6084+00H	协议减速度	根据需要设定	Unit/(S*S)

6.2 操作说明

6.2.1 输入输出口设置

6.2.1.1 输入口

驱动器丝印上 IN1~IN3 为单端输入口，对应输入口 1~3，驱动器上 pl+, pl-, dr+, dr- 为差分高速输入口，对应输入口 4~5。

与 IO 输入信号相关的参数列表：

地址	参数名称	属性	出厂默认	参数可设置范围	说明
2152h+01	输入数字 IO 口 1 功能选择	R/W/S	1	0—32768	1: 原点信号 2: 左限位 4: 右限位
2152h+02	输入数字 IO 口 2 功能选择	R/W/S	2	0—32768	1: 原点信号 2: 左限位 4: 右限位
2152h+03	输入数字 IO 口 3 功能选择	R/W/S	4	0—32768	1: 原点信号 2: 左限位 4: 右限位
2152h+04	输入数字 IO 口 4 功能选择	R/W/S	8	0—32768	1: 原点信号 2: 左限位 4: 右限位
2152h+05	输入数字 IO 口 5 功能选择	R/W/S	0	0—32768	1: 原点信号 2: 左限位 4: 右限位
2153h+01	输入数字 IO 口 1 滤波时间	R/W/S	20	1—60000	单位: 50us
2153h+02	输入数字 IO 口 2 滤波时间	R/W/S	20	1—60000	单位: 50us
2153h+03	输入数字 IO 口 3 滤波时间	R/W/S	20	1—60000	单位: 50us

	3 滤波时间				
2153h+04	输入数字 I0 口 4 滤波时间	R/W/S	20	1—60000	单位: 50us
2153h+05	输入数字 I0 口 5 滤波时间	R/W/S	20	1—60000	单位: 50us
2154h+00	输入数字 I0 电 平极性配 置	R/W/S	0	0/1	0: 正逻辑 1: 反逻辑 bit0: I01 极性设置 bit1: I02 极性设置 bit2: I03 极性设置 bit3: I04 极性设置 bit4: I05 极性设置
2155h+00	输入数字 I01 电平	R	0	0~32768	Bit0 对应外部输入 1, 以此类推

以下是 I0 状态的功能状态:

地址	参数名称	属性	说明
60FDh+00	输入 I0 状态	R	bit0: 负限位, bit1: 正限位, bit2: 原点信号

1.2.1.2 输出口

- (1) 外部电源由用户提供, 但是必需注意, 如果电源的极性接反, 会使步进驱动器损坏。
- (2) 输出为集电极开路形式, 最大电流 50mA, 外部电源最大电压 25V。因此, 开关量输出信号的负载必须满足这个限定要求。如果超过限定要求或输出直接与电源连接, 会使步进驱动器损坏。
- (3) 如果负载是继电器等感性负载, 必须在负载两端反并联续流二极管。如果续流二极管接反, 会使步进驱动器损坏。

与 I0 输出信号相关的参数列表:

地址	参数名称	属性	出厂默认	参数可设置范围	说明
2005h+01	输出口 1 功能 阻态设置	R/W/S	1	1—4	bit0: 报警输出 bit1: ready 输出 Bit2: 到位输出
2005h+02	输出口 2 功能 阻态设置	R/W/S	1	1—4	bit0: 报警输出 bit1: ready 输出 Bit2: 到位输出
2008h+00	输出口 1 阻态 设置	R/W/S	0	0/1	0: 有报警、准备好或到位时光耦导通 1: 有报警、准备好或到位时光耦截止 位定义: bit0 对应 out1 以此类推

6.2.2 驱动器节点地址

主站可以自动扫描节点地址, 也可以人为设置。

(1) 拨码开关设置

当 2151h 对象为 0 时, 用户可采用驱动器上的拨码开关设置从站地址。(注: 此地址设定在驱动器重新投入电源时才有效)。

(2) 读取固定站点别名

主站可以配置站点别名到 EEPROM 0x0004 字地址，当 2051h 对象数据为 0，且驱动器前面板旋码地址为 0 时，在驱动器重新投入电源后，0x0004 字地址数据将被设定为站点别名。

(3) 对象字典设定站点别名

2151h 设定为 1 时，驱动器在重新得电后将使用 2150h 对象的数据作为站点别名地址。

地址	参数名称	属性	出厂默认	参数可设置范围	说明
2150h+00	从站地址	R/W/S	1	1—65535	从站地址
2151h+00	从站地址来源	R/W/S	0	0~2	0: 来源于拨码，当拨码为 0 时，来源于 EEPROM。 1: 来源于 2150h

6.2.3 电机旋转方向设定

主站发送位置指令，设定该功能可实现电机正反转

地址	参数名称	属性	出厂默认	参数可设置范围	说明
2051h+00	电机运行方向	R/W/S	0	0/1	0: 电机运行方向不变 1: 电机运行方向取反

6.2.4 每转脉冲数/细分数/电子齿轮

步进电机无单独的电子齿轮参数，只需要设置每转脉冲数即可

地址	参数名称	属性	出厂默认	参数可设置范围	说明
2001h+00	每转脉冲数	R/W/S	50000	200—51200	表示电机运行一转所需要的脉冲个数

6.2.5 保存参数

(1) 保存参数：主站通过操作 0x1010-04 来保存用户参数到 EEPROM，如果驱动器检测到主控发送的 0x1010-04 的数据是 0x65766173 时，驱动器会保存当前的参数到 EEPROM。（注意：EEPROM 写入操作中，请不要关闭电源，否则可能会导致写入错误数据，若发生此种情况，请重新设置全部参数，再保存参数）。

(2) 恢复出厂：主站通过操作 0x1011-04 来恢复出厂值，如果驱动器检测到主控发送的 0x1011-04 的数据是 0x64616f6c 时，驱动器会恢复出厂默认值。

6.2.6 参数表

1. 厂家参数：

地址	参数名称	属性	出厂默认参数	参数可设置范围	说明
2000h+00	峰值电流	R/W/S	3200	1—最大电流	最大电流由驱动器软件定义(mA)。
2001h+00	每转脉冲数	R/W/S	50000	200—51200	表示电机运行一转所需要的脉冲个数
2002h+00	待机时间	R/W/S	500	100—10000	单位：ms
2005h+01	输出口 1 功能阻态设置	R/W/S	1	1—4	bit0: 报警输出 bit1: ready 输出 Bit2: 到位输出
2005h+02	输出口 2 功能阻态设置	R/W/S	1	1—4	bit0: 报警输出 bit1: ready 输出 Bit2: 到位输出
2008h+00	输出口 1 阻态设置	R/W/S	0	0/1	0: 有报警、准备好或到位时光耦导通 1: 有报警、准备好或到位时光耦截止 位定义: bit0 对应 out1 以此类推
2009h+00	脉冲滤波使能	R/W/S	0	0/1	0: 不使能 1: 使能(Fir 滤波时间起作用)
2010h+02	滤波时间	R/W/S	1000	50—25600	Fir 时间范围为 50—25600us
2013h+00	电流环自整使能	R/W/S	1	0/1	电流环 PI 上电自动整定功能: 0: 不使能 1: 使能
2015h+00	电流环 Kp	R/W/S	1000	200—32767	自整定使能时, 该项只读; 不使能时用户可改写
2016h+00	电流环 Ki	R/W/S	200	0—32767	自整定使能时, 该项只读; 不使能时用户可改写
2017h+00	电流环 Kc	R/W/S	100	80—300	自动获取, 不允许客户修改
2020h+00	电机电阻	R/W/S	1000	1—20000	单位: mOhms
2021h+00	电机电感	R/W/S	1	1—6000	单位: uH
2024h+00	混合伺服开闭环控制选择	R/W/S	2	0~2	1: 运行于开环模式 2: 运行于闭环控制模式
2025h+00	混合伺服控制模式	R/W/S	5	0—10	0: 拨码选择 1: Lead 2: PM 3: FOC 4: 自测 5: CL
2026h+00	混合伺服锁轴电流	R/W/S	50	0—100	单位: %, 开环使用
2029h+00	混合伺服编码器线数	R/W/S	1000	200—60000	p/r

2030h+00	混合伺服位置超差报警值	R/W/S	1000	1—60000	p
2039h+00	外部位置总数 H	R	0	0~65535	接收的位置指令累加值高 16bit
2040h+00	外部位置总数 L	R/W	0	0~65535	接收的位置指令累加值低 16bit 写：写入 1 清除计数器
2041h+00	编码器反馈总数 H	R	0	0~65535	编码器反馈总数高 16bit
2042h+00	编码器反馈总数 L	R/W	0	0~65535	编码器反馈总数低 16bit 写：写入 1 清除计数器
2051h+00	电机运行方向	R/W/S	0	0/1	0: 电机运行方向不变 1: 电机运行方向取反
2053h+00	到位信号输出阻态	R/W/S	0	0~1	0:低阻 1: 高阻
2056h+00	故障检测选择	R/W/S	0xc3	0—0xffff	查阅相关文档再修改
2057h+00	允许使能信号清除故障选择	R/W/S	0	0/1	0: 不允许 1: 允许
2058h+00	使能信号电流软启动时间	R/W/S	1	0—10000	为减小电机上电和使能时转子的振动。单位：50us
2083h+00	上电是否左右摆动	R/W/S	0	0/1	0:无动作 1:左右摆动
2137h+00	位置环 KP	R/W/S	120	0~150	无
2138h+00	位置环 KI	R/W/S	50	0~150	无
2139h+00	位置环 KVFF	R/W/S	70	0~150	无
2140h+00	速度环 KP	R/W/S	60	0~150	无
2150h+00	从站地址	R/W/S	1	1—65535	从站地址
2151h+00	从站地址来源	R/W/S	0	0~2	0: 来源于拨码，当拨码为 0 时，来源于 EEPROM. 1: 来源于 2150h
2152h+01	输入数字 IO 口 1 功能选择	R/W/S	1	0—32768	1: 原点信号 2: 左限位 4: 右限位
2152h+02	输入数字 IO 口 2 功能选择	R/W/S	2	0—32768	1: 原点信号 2: 左限位 4: 右限位
2152h+03	输入数字 IO 口 3 功能选择	R/W/S	4	0—32768	1: 原点信号 2: 左限位 4: 右限位
2152h+04	输入数字 IO 口 4 功能选择	R/W/S	8	0—32768	1: 原点信号 2: 左限位 4: 右限位
2152h+05	输入数字 IO 口 5 功能选择	R/W/S	0	0—32768	1: 原点信号 2: 左限位 4: 右限位
2153h+01	输入数字 IO 口	R/W/S	20	1—60000	单位：50us

	1 滤波时间				
2153h+02	输入数字 I0 口 2 滤波时间	R/W/S	20	1—60000	单位: 50us
2153h+03	输入数字 I0 口 3 滤波时间	R/W/S	20	1—60000	单位: 50us
2153h+04	输入数字 I0 口 4 滤波时间	R/W/S	20	1—60000	单位: 50us
2153h+05	输入数字 I0 口 5 滤波时间	R/W/S	20	1—60000	单位: 50us
2154h+00	输入数字 I0 电 平极性配 置	R/W/S	0	0/1	0: 正逻辑 1: 反逻辑 bit0: I01 极性设置 bit1: I02 极性设置 bit2: I03 极性设置 bit3: I04 极性设置 bit4: I05 极性设置
2155h+00	输入数字 I01 电平	R	0	0~32768	Bit0 对应外部输入 1, 以此类推
2093h+00	清除故障记录	R/W			

2. 模式及控制参数

地址	参数名称	属性	说明
6040h+00	控制字	R/W	控制字
6041h+00	状态字	R	状态字
6060h+00	模式设置	RW	工作模式: 1—位置模式 3—速度模式 6—回原点模式 8—循环同步位置模式
6061h+00	模式查询	R	显示驱动器的工作模式
6062h+00	命令位置	R	显示电机命令位置
6064h+00	实际位置	R	显示电机实际位置
606Bh+00	命令速度	R	显示电机命令速度
606Ch+00	实际速度	R/W	显示电机的实际速度, 单位: RPM
607Ah+00	目标位置	R/W	工作模式 1 下的目标位置, 如果控制字设定为开始运动, 转变成为有效指令位置
607Ch+00	原点偏移	R/W	原点偏移

6081h+00	梯形速度	R/W	工作模式 1 时的梯形曲线的最大速度
6082h+00	起止速度	R/W	工作模式 1 时的起跳速度和停止速度
6083h+00	梯形加速度	R/W	梯形曲线的加速度
6084h+00	梯形减速度	R/W	梯形曲线的减速度
6085h+00	快速停止减速度	R/W	急停减速度，是否使用取决于 605A 的值
6098h+00	回原点模式	R/W	寻找原点模式
6099h+01	回原点模式速度	R/W	寻找极限开关的速度
6099h+02	回原点模式速度	R/W	寻找原点信号的速度
609Ah+00	回原点加速度	R/W	寻找原点时加速度
60F4h+00	位置误差	R	位置误差
60FDh+00	输入 I0 状态	R	bit0: 负限位, bit1: 正限位, bit2: 原点信号
60FFh+00	目标速度	R/W	工作模式 3 时的最大速度

7 保修及售后服务 /Warranty and after-sales service

请保留好包装箱以便运输、储存或需要退回本公司维修时使用。一年保修期：

Please keep the packing box for transportation, storage or need to return to the company for maintenance. One year warranty period:

来自本驱动器使用一年内因为产品自身的原因造成的损坏，负责保修。

From the use of this drive within one year because of the product itself caused by the damage, responsible for the warranty.

不在保修之列：/Not covered by warranty:

不恰当的接线、电源电压和用户外围配置造成的损坏。/Damage caused by improper wiring, power supply voltage and user peripheral configuration.

无本公司书面授权条件下，用户擅自对产品进行更改。/Without the written authorization of the company, users make changes to the products without authorization.

超出电气和环境的要求使用。/Use beyond electrical and environmental requirements.

驱动器序列编号被撕下或无法辨认。/The drive serial number has been torn off or is unreadable.

外壳被明显破坏。/The outer shell was visibly damaged.

不可抗拒的灾害。/An irresistible disaster. 6.2 售后服务 /Aftersales Service

添加微信或者拨打电话



(+86) 18926788846

Email: Tech@TQKTEC.COM

您拨打电话之前，请先记录以下信息：

Before you call, please record the following information:

故障现象/Fault phenomenon

产品型号和序列号/Product model and serial number

安装日期或者生产日期/Installation date or production date