


SO43D

开环步进驱动器使用手册

OPEN LOOP STEP MOTOR DRIVE User's Manual

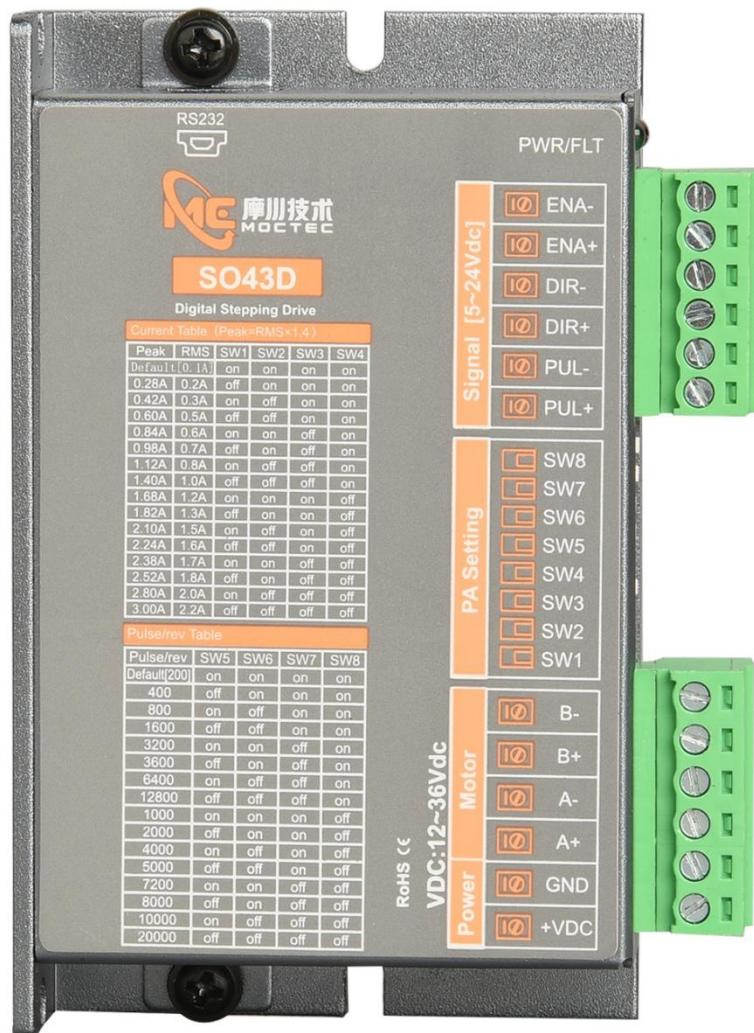

摩川技术(深圳)有限公司

Moschon Technology (Shenzhen) Co. , Ltd.

该产品由深圳市泰奇科智能技术有限公司独家发行，版权所有！

目录

前言/Foreword.....	3
1 概述/Overview.....	4
1. 1 产品介绍/Product Introduction.....	4
1. 2 特性/Characteristics.....	4
1. 3 应用领域/Application areas.....	5
2 性能指标/Performance Index.....	5
2. 1 电气特性/Electrical characteristics.....	5
2. 2 使用环境/Use environment.....	6
3 安装/Installation.....	6
3. 1 安装尺寸/Mounting dimensions.....	6
3. 2 安装方法/Installation method.....	7
4 驱动器端口与接线/Driver ports and wiring.....	7
4. 1 接线示意图/Schematic diagram of wiring.....	7
4. 2 端口定义/Port Definition.....	8
5 拨码定义/Dial definition.....	12
5. 1 电流设定/The current setting.....	12
5. 2 细分设定/Subdivision setting.....	13
6 保修及售后服务 /Warranty and after-sales service.....	14

前言/Foreword

感谢您使用本公司开环步进驱动器。

Thank you for using our open step drive.

在使用本产品前, 请务必仔细阅读本手册, 了解必要的安全信息、注意事项以及操作方法等。错误的操作可能引发极其严重的后果。

Before using this product, please read this manual carefully to understand the necessary safety information, precautions, and operation methods. Incorrect operation can have extremely serious consequences.

本产品的设计和制造不具备保护人身安全免受机械系统威胁的能力, 请用户在机械系统设计和制造过程中考虑安全防护措施, 防止因不当的操作或产品异常造成事故。

This product is designed and manufactured without the ability to protect personal safety from mechanical system threats. Users are advised to consider safety precautions during mechanical system design and manufacturing to prevent accidents caused by improper operation or product abnormalities.

由于产品的改进, 手册内容可能变更, 恕不另行通知。用户对产品的任何改装我公司将不承担任何责任。

阅读时, 请注意手册中的以下标示:

Due to product improvements, the contents of this manual are subject to change without notice. Our company will not be responsible for any modification of the product by the user.

When reading, please pay attention to the following signs in the manual:




注意: 提醒您注意文字中的要点。



小心: 表示错误的操作可能导致人身伤害和设备损坏。

本产品经过国家强制 3C 认证, CE 认证, ROHS 认证

This product has passed the national mandatory 3C certification, CE certification, ROHS certification

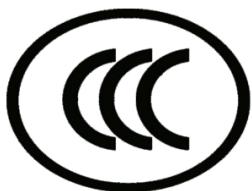

1 概述/Overview

1.1 产品介绍/Product Introduction

S043D 是公司新推出的数字式步进电机驱动器，采用最新 32 位 ARM 数字处理技术，驱动器控制算法采用先进的变电流技术和先进的变频技术，驱动器发热小，电机振动小，运行平稳。用户可以设置 200~51200 内的任意细分以及额定电流内的任意电流值，能够满足大多数应用需要。由于采用内置微细分技术，即使在低细分的条件下，也能够达到高细分的效果，低中高速运行都很平稳，噪音超小。驱动器内部集成了参数上电自动整定功能，能够针对不同电机自动生成最优运行参数，最大限度发挥电机的性能。

S043D is the company's new digital stepper motor driver, using the latest 32-bit ARM digital processing technology, drive control algorithm using advanced variable current technology and advanced frequency technology, the driver heat small, motor vibration small, smooth operation. USERS can set 200 ~ 51200 within the arbitrary subdivision and rated current within the arbitrary current value, to meet the needs of most applications. Due to the use of built-in micro-subdivision technology, even in the conditions of low subdivision, but also can achieve high subdivision effect, low, medium and high-speed operation is very smooth, ultra-low noise. The auto-tuning function is integrated in the driver, which can automatically generate the optimal operating parameters for different motors and maximize the performance of the motors.

1.2 特性/Characteristics

- 全新 32 位 ARM 技术

New 32-bit ARM technology

- 超低振动噪声

Ultra low vibration noise

- 内置高细分

Built-in high subdivision

- 参数上电自动整定功能

Parameter power-on automatic setting function

- 变电流控制使电机发热大为降低

Variable current control can greatly reduce the heating of the motor

- 静止时电流自动减半

At rest the current is automatically halved

- 可驱动 4, 6, 8 线两相步进电机

Can drive 4, 6, 8-wire two-phase stepping motor

- 光隔离差分信号输入

Optical isolated differential signal input

- 脉冲响应频率最高可达 500KHz (出厂默认 160KHz)

Pulse response frequency up to 500 KHZ (factory default 160 Khz)

- 电流设定方便，可在 0.1~3.0A 之间任意选择

The current setting is convenient, and can be anywhere from 0.1 to 3.0 a

- 细分设定范围为 200~51200

Subdivide it to 200~51200

- 具有过压、欠压、过流等保护功能

With over-voltage, under-voltage, over-current and other protection functions

1.3 应用领域/Application areas

适合各种中小型自动化设备和仪器，例如：锂电设备、3C 电子设备、雕刻机、打标机、切割机、激光照排、雕刻机，绘图仪、数控机床、自动装配设备等。在用户期望小噪声、高速度的设备中应用效果特佳。

Suitable for all kinds of small and medium-sized automation equipment and instruments, such as: lithium battery equipment, 3C electronic equipment, engraving machine, marking machine, cutting machine, laser phototypesetting, engraving machine, plotter, CNC machine tool, automatic assembly equipment, etc. It is especially effective in applications where users expect small noise and high speed.

2 性能指标/Performance Index

2.1 电气特性/Electrical characteristics


说明 Explanation	SO43D			
	最小值 Minimum Value	典型值 Typical Value	最大值 Maximal Value	单位 Unit
连续输出电流 Continuous output current	0.1	-	3.0	A
电源电压（直流） Power Supply Voltage (DC)	12	24	32	Vdc
逻辑输入电流 Logic input current	6	10	16	mA
逻辑输入电压 Logical input voltage	5	5	24	Vdc
输入信号最小脉冲宽度 Minimum pulse width of input signal	1.5	-	-	us
步进脉冲频率 Step frequency	0	-	160	KHz
绝缘电阻 Insulation Resistance	500	-	-	MΩ

2.2 使用环境/Use environment

冷却方式 Cooling Mode		自然冷却或强制风冷 Natural Cooling or forced air cooling
使用环境 Service Environment	场合 Occasion	不能放在其它发热的设备旁, 要避免粉尘、油雾、腐蚀性气体, 湿度太大及强振动场所, 禁止有可燃气体和导电灰尘。 Can not be placed next to other heating equipment, to avoid dust, oil mist, corrosive gases, humidity is too large and strong vibration sites, prohibited combustible gases and conductive dust.
	温度 Temperature	-10°C ~ +50°C
	湿度 Humidity	40 ~ 90%RH
	振动 Vibration	5. 9m/s ² MAX
	保存温度 Storage temperature	-20°C~60°C
使用海拔 Use Elevation		1000 米以下 Below 1000 meters
重量 Weight		0. 2KG

3 安装/Installation

3.1 安装尺寸/Mounting dimensions

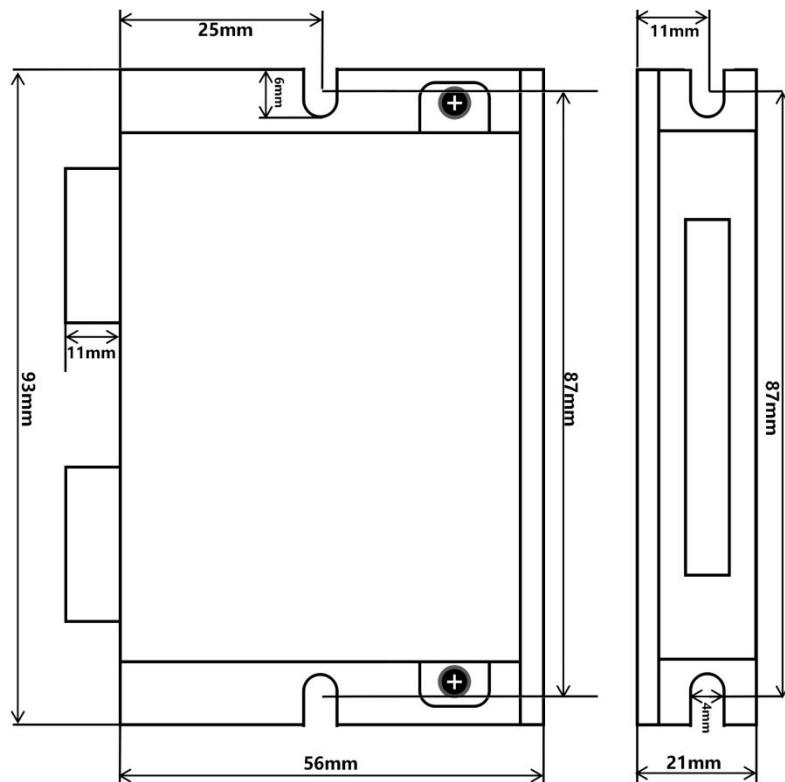

3.2 安装方法/Installation method

驱动器的可靠工作温度通常在 60℃ 以内，电机工作温度为 80℃ 以内。

The reliable operating temperature of the driver is usually within 60°C, and the motor operating temperature is within 80°C.

建议使用时选择自动半流方式，马达停止时电流自动减一半，以减少电机和驱动器的发热。

It is recommended to use the automatic semi-flow mode when using the motor. When the motor stops, the current is automatically reduced by half to reduce the heat of the motor and the drive.

安装驱动器时请采用竖着侧面安装，使散热齿形成较强的空气对流。


Install the drive with vertical side mounting so that the heat dissipating teeth form a strong air convection.

必要时机内靠近驱动器处安装风扇，强制散热，保证驱动器在可靠工作温度范围内工作。

Install a fan near the drive when necessary to force heat dissipation to ensure that the drive works within a reliable operating temperature range.

4 驱动器端口与接线/Driver ports and wiring

4.1 接线示意图/Schematic diagram of wiring


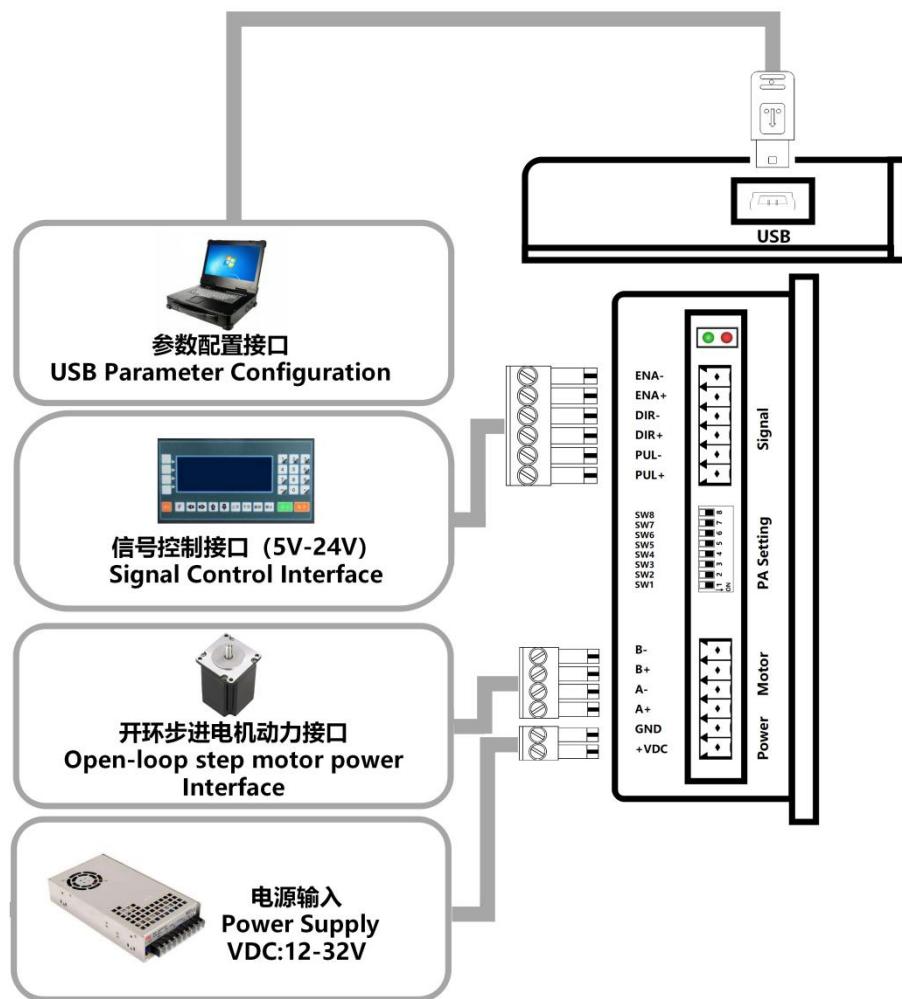


4.2 端口定义/Port Definition

4.2.1 LED 灯状态指示/Lamp status indication

绿色 LED 为电源指示灯，当驱动器接通电源时，该 LED 常亮；当驱动器切断电源时，该 LED 熄灭。红色 LED 为故障指示灯，当出现故障时，该指示灯以 3 秒钟为周期循环闪烁；当故障被用户清除时，红色 LED 常灭。红色 LED 在 3 秒钟内闪烁次数代表不同的故障信息，具体关系如下表所示：

The green LED is the power indicator, which is always on when the driver is connected to the power; when the driver cuts off the power, the LED goes out. Red Led is the failure indicator, when there is a failure, the indicator lamp for 3 seconds cycle flashing; when the failure is cleared by the user, red LED often out. Red Led flashes in 3 seconds represent different failure information, as shown in the table below:

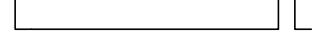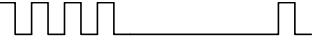序号 No.	闪烁次数 The number of flashes	红色 LED 闪烁波形 Red Blue B1 BLED flashes waveform	故障说明 Description of the problem
1	1		过流或相间短路故障 Overcurrent or interphase short circuit fault
2	2		过压故障 Overvoltage fault
3	3		无定义 Undefined
4	4		无定义 Undefined

4.2.2 控制信号输入端口/Control Signal Input Port

控制信号接口

Control Signal interface



名称 Name	功能 Function
PUL+	高速信号：脉冲上升沿有效；PL 高电平时 4.5~28Vdc，低电平时 0~0.5V。为了可靠响应脉冲信号，脉冲宽度应大于 1.5 μs。 HIGH-SPEED SIGNAL: Pulse rising edge is effective, PL high level 4.5 ~ 28 VDC, Low Level 0 ~ 0.5 v. In order to respond reliably to the pulse signal, the pulse width should be greater than 1.5 s.
PUL-	高速信号：脉冲上升沿有效；PL 高电平时 4.5~28Vdc，低电平时 0~0.5V。为了可靠响应脉冲信号，脉冲宽度应大于 1.5 μs。 HIGH-SPEED SIGNAL: Pulse rising edge is effective, PL high level 4.5 ~ 28 VDC, Low Level 0 ~ 0.5 v. In order to respond reliably to the pulse signal, the pulse width should be greater than 1.5 s.
DIR+	高速信号：脉冲上升沿有效；PL 高电平时 4.5~28Vdc，低电平时 0~0.5V。为了可靠响应脉冲信号，脉冲宽度应大于 1.5 μs。 HIGH-SPEED SIGNAL: Pulse rising edge is effective, PL high level 4.5 ~ 28 VDC, Low Level 0 ~ 0.5 v. In order to respond reliably to the pulse signal, the pulse width should be greater than 1.5 s.
DIR-	使能信号：此输入信号用于使能或禁止。ENA+ 接 4.5~28Vdc，ENA-接低电平（或内部光耦导通）时，驱动器将切断电机各相的电流使电机处于自由状态，此时步进脉冲不被响应。当不需用此功能时，使能信号端悬空即可。
ENA+	使能信号：此输入信号用于使能或禁止。ENA+ 接 4.5~28Vdc，ENA-接低电平（或内部光耦导通）时，驱动器将切断电机各相的电流使电机处于自由状态，此时步进脉冲不被响应。当不需用此功能时，使能信号端悬空即可。


ENA-

Enabling Signal: This input signal is used for enabling or disabling. When ENA+ connected with 4.5 ~ 28 VDC, ENA-connected with low level (or internal optocoupler on) , the driver will cut off the current of each phase of the motor and make the motor in the Free State, then the step pulse will not be responded. When this function is not needed, the signal can be suspended.

控制信号接口电路

Control Signal Interface circuit

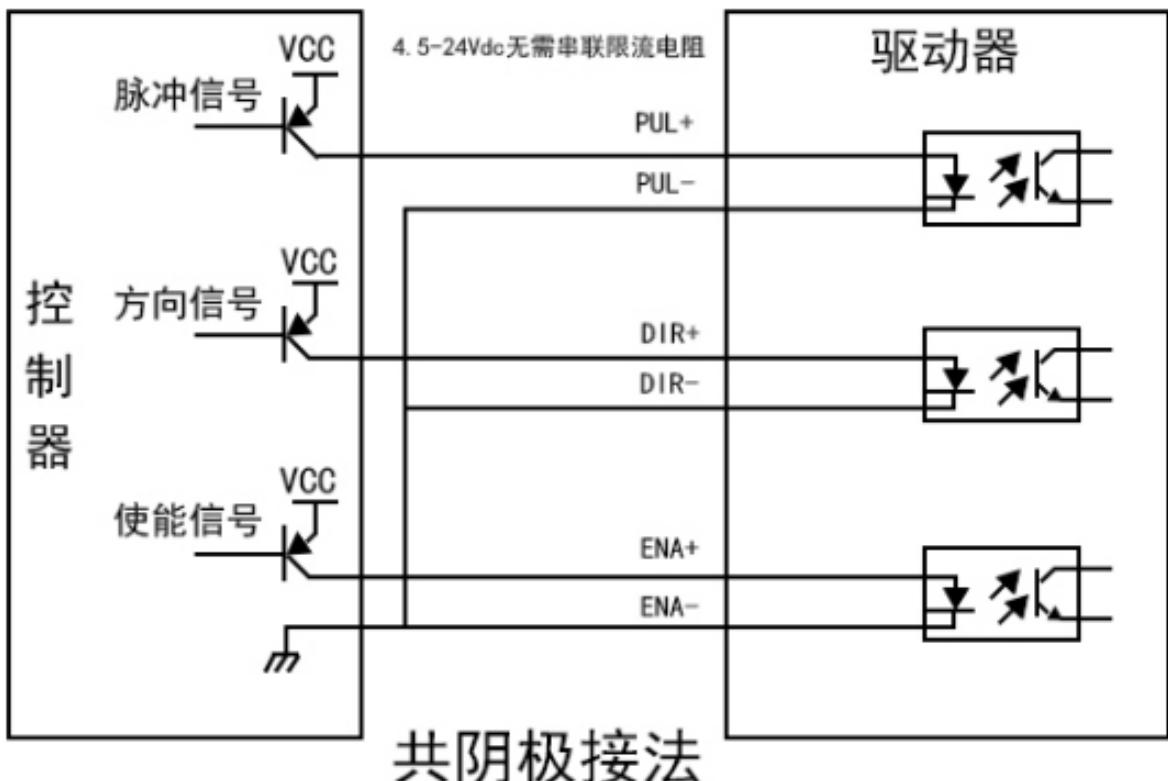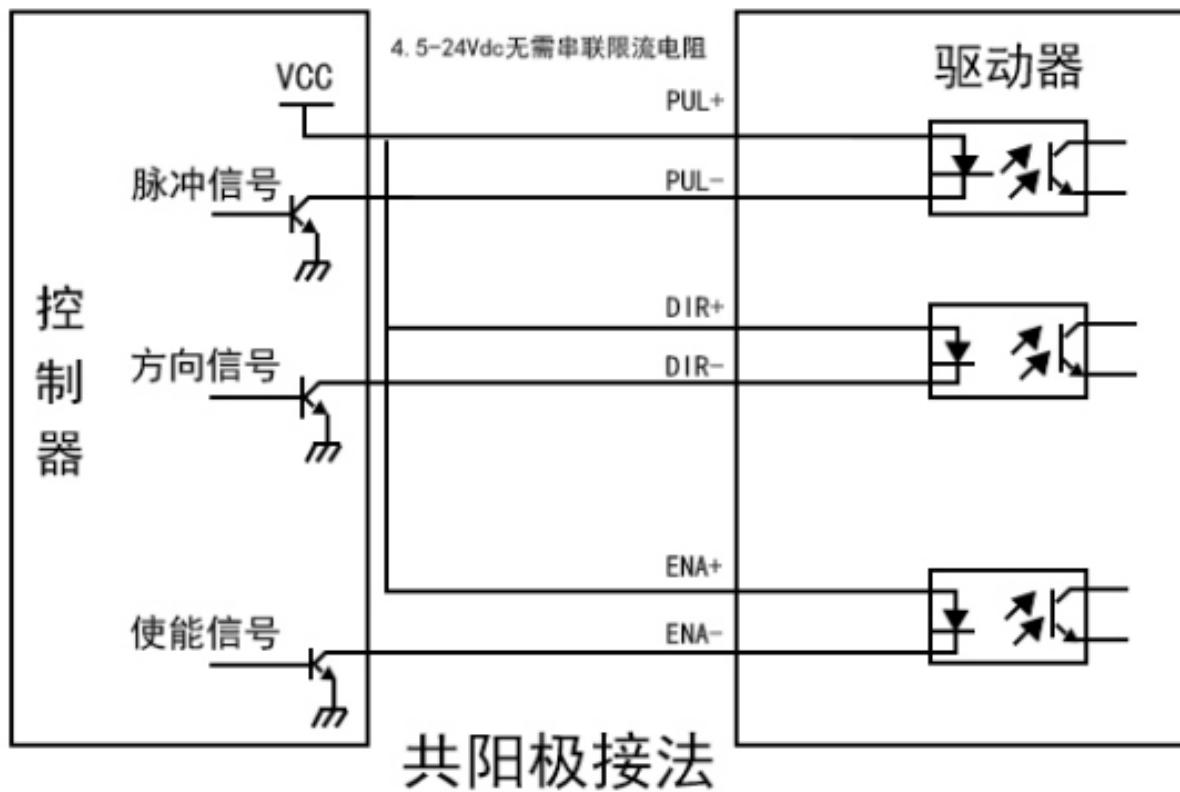

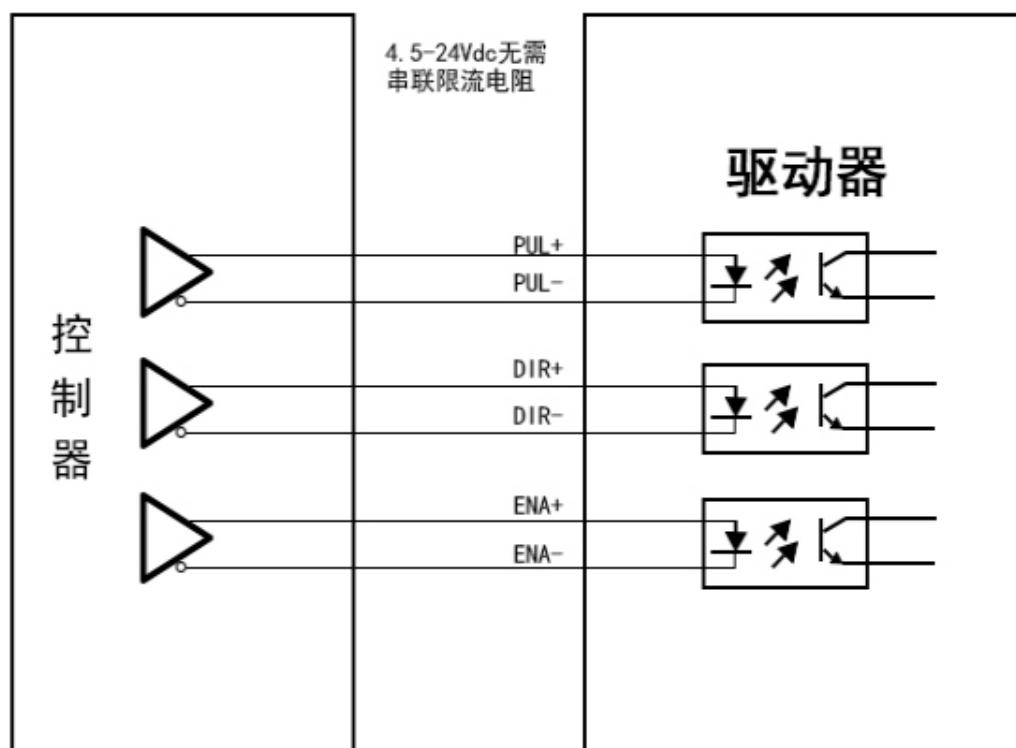

差分方式控制信号接口接线图

控制信号时序图

Control signal sequence diagram

为了避免一些误动作和偏差, PUL、DIR 和 ENA 应满足一定要求, 如下图所示:

To avoid some mistakes and deviations, Pul, Dir, and Ena should meet certain requirements, as shown in the following figure:

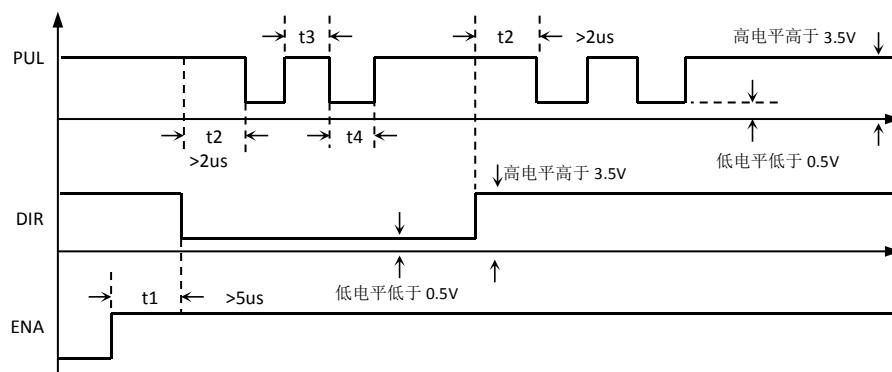


图 4 控制信号时序图

注释:

Notes:

t1: ENA (使能信号) 应提前 DIR 至少 $5 \mu s$, 确定为高。一般情况下建议 ENA+和 ENA-悬空即可。

T1: Ena (enable signal) should be at least 5 s ahead of Dir, determined as high. Generally, it is recommended that ENA + and ENA-hover.

t2: DIR 至少提前 PUL 下降沿 $2 \mu s$ 确定其状态高或低。

T2: Dir is at least 2 seconds ahead of Pul's descent to determine whether it is high or low.

t3: 脉冲宽度至少不小于 $2 \mu s$ 。

T3: Pulse width not less than 2 seconds.

t4: 低电平宽度不小于 $2 \mu s$ 。

T4: LOW LEVEL WIDTH NOT LESS THAN 2 S.

4.2.3 电源及电机输出端口/Output ports of power supply and motor

供电与电机动力接口

Power supply and motor power interface

名称 Name	功能 Function
GND	直流电源地 DC power source
+VDC	直流电源正极, 供电电压范围: 直流 12-32Vdc, 推荐 24Vdc 工作。 DC Power Supply Positive Pole, supply voltage range: DC 12-32VDC, recommended 24VDC work.
A+	电机 A 相线圈接口 Motor phase a coil interface
A-	
B+	电机 B 相线圈接口 Motor phase b coil interface
B-	

4.2.4 RS232 通讯 USB 接口

可以通过专用 UCB 串口电缆连接 PC 机或 STU 调试器, 禁止带电插拔。通过 STU 或在 PC 机软件 ProTuner 可以进行客户所需要的细分和电流值、有效沿和单双脉冲等设置, 还可以进行共振点的消除调节。

You can connect the PC or STU debugger through the dedicated UCB serial port cable, no live plug. By STU or in the PC software ProTuner can be customers need to subdivide and current value, effective along and single and double pulse settings, but also can be resonance point elimination adjustment.

端子号 Terminal number	符号 Symbols	名称 Name	说明 Account for
1	+5V	5V 电源正端 5V Power Terminal	仅供外部 STU Outside STU only
2	TxD	RS232 发送端 RS232 transmitter	
3	RxD	RS232 接收端 RS232 receiver	
4	GND	5V 电源地 5V ground	0V
5	NC	RS232 接收端 RS232 transmitter	

电源电压在规定范围之间都可以正常工作, 驱动器最好采用非稳压型直流电源供电, 也可以采用变压器降压+桥式整流+电容滤波。但注意应使整流后电压纹波峰值不超过其规定的最大电压。建议用户使用低于最大电压的直流电压供电, 避免电网波动超过驱动器电压工作范围。

The power supply voltage can work normally between the specified ranges. The driver is preferably powered by an unregulated DC power supply, or a transformer buck + bridge rectifier + capacitor filter. Note, however, that the peak voltage ripple after rectification should not exceed its specified maximum voltage. It is recommended that the user supply power with a DC voltage lower than the maximum voltage to prevent the grid from fluctuating beyond the operating range of the driver voltage.

如果使用稳压型开关电源供电，应注意开关电源的输出电流范围需设成最大。
If using a regulated switching power supply, be aware that the output current range of the switching power supply must be set to maximum.

请注意：

Please note:

接线时要注意电源正负极切勿反接；

When wiring, pay attention to the positive and negative poles of the power supply, do not reverse connection;

最好用非稳压型电源；

It is better to use an unstable power supply;

采用非稳压电源时，电源电流输出能力应大于驱动器设定电流的 60%即可；

The output capacity of the power supply current should be greater than 60% of the set current of the driver when an unstable power supply is used;

采用稳压开关电源时，电源的输出电流应大于或等于驱动器的工作电流；

When a regulated switching power supply is adopted, the output current of the power supply shall be greater than or equal to the working current of the driver;

为降低成本，两三个驱动器可共用一个电源，但应保证电源功率足够大。

To reduce costs, two or three drives can share a power supply, but the power supply should be large enough.

5 拨码定义/Dial definition

5.1 电流设定/The current setting

Peak	RMS	SW1	SW2	SW3	SW4
Default [0. 1A]		on	on	on	on
0. 28A	0. 2A	off	on	on	on
0. 42A	0. 3A	on	off	on	on
0. 60A	0. 5A	off	off	on	on
0. 84A	0. 6A	on	on	off	on
0. 98A	0. 7A	off	on	off	on
1. 12A	0. 8A	on	off	off	on
1. 40A	1. 0A	off	off	off	on

1. 68A	1. 2A	on	on	on	off
1. 82A	1. 3A	off	on	on	off
2. 10A	1. 5A	on	off	on	off
2. 24A	1. 6A	off	off	on	off
2. 38A	1. 7A	on	on	off	off
2. 52A	1. 8A	off	on	off	off
2. 80A	2. 0A	on	off	off	off
3. 00A	2. 2A	off	off	off	off

注：如上电流为标准产品 S043D 电流，其它电流可以根据客户需求派生，能设定的电流范围为 0.1-3.0A 之间的任意值。

Note: If the current is standard product S043D current, other current can be derived according to customer demand, can set the current range between 0.1-3.0 a arbitrary value.

5.2 细分设定/Subdivision setting

Pulse/rew	SW5	SW6	SW7	SW8
Default[200]	on	on	on	on
400	off	on	on	on
800	on	off	on	on
1600	off	off	on	on
3200	on	on	off	on
3600	off	on	off	on
6400	on	off	off	on
12800	off	off	off	on
1000	on	on	on	off
2000	off	on	on	off
4000	on	off	on	off
5000	off	off	on	off
7200	on	on	off	off
8000	off	on	off	off
10000	on	off	off	off
25000	off	off	off	off

注：如上细分位为标准产品 S043D 细分，其它细分可以根据客户需求派生，能设定的细分范围为

200~51200 之间的任意值。

Note: The above subdivides into the standard product S043D subdivides, other subdivides may according to the customer demand derivation, can set subdivides the scope between 200~51200 any value.

5.3 参数自整定功能/Parameter self-tuning function

驱动器为开环步进驱动时，驱动器能上电自动匹配电机参数。注意此时不能输入脉冲，方向信号也不应变化，使能信号不能接入。

When the driver is open-loop step-by-step drive, the driver can power up to match the motor parameters automatically. Note that at this time can not input pulse, direction signal should not change, so that the signal can not access.

6 保修及售后服务 /Warranty and after-sales service

请保留好包装箱以便运输、储存或需要退回本公司维修时使用。一年保修期：

Please keep the packing box for transportation, storage or need to return to the company for maintenance. One year warranty period:

来自本驱动器使用一年内因为产品自身的原因造成的损坏，负责保修。

From the use of this drive within one year because of the product itself caused by the damage, responsible for the warranty.

不在保修之列：/Not covered by warranty:

不恰当的接线、电源电压和用户外围配置造成的损坏。/Damage caused by improper wiring, power supply voltage and user peripheral configuration.

无本公司书面授权条件下，用户擅自对产品进行更改。/Without the written authorization of the company, users make changes to the products without authorization.

超出电气和环境的要求使用。/Use beyond electrical and environmental requirements.

驱动器序列编号被撕下或无法辨认。/The drive serial number has been torn off or is unreadable.

外壳被明显破坏。/The outer shell was visibly damaged.

不可抗拒的灾害。/An irresistible disaster.

6.2 售后服务 /Aftersales Service

添加微信或者拨打电话



(+86) 18926788846

Email: Tech@TQKTEC.COM

您拨打电话之前，请先记录以下信息：

Before you call, please record the following information:

故障现象/Fault phenomenon

产品型号和序列号/Product model and serial number

安装日期或者生产日期/Installation date or production date